 
 


Belt End Replacement

Parts List:

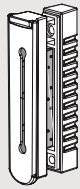

(1) Belt End

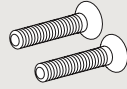

(2) Screws



Scissors



Goggles



Phillips Crosshead Screw Driver

Required Tools

1. Extend belt 18" to 24" from post. Tie belt in a loose knot to prevent belt from retracting back into post. See Figure A.
2. Cut belt 1/4" from existing belt end. See Figure B.
3. Make sure the back of the Belt End is facing upright. The top has a longer extension than the bottom. Thread belt through new Belt End back. See Figure C.
4. Wrap belt end around wedge. See Figure D.
5. Pull wedged belt end tightly into cavity of belt end back piece. Ensure belt is straight and not wrinkled. See Figure E.
6. Position Belt End front and secure with the 2 screws. See Figure F.
7. Release belt back into post.

