


# Beltloc

## Parts List:

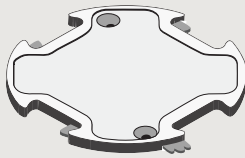

Beltloc



Label



Goggles



Phillips Crosshead Screw Driver

## Required Tools

1. Remove Label. See Figure A.
2. Remove the two Phillips head screws marked for "Mechanism Removal" noted by the arrows. *Do Not remove any of the other screws.* Removal of the Spring/Belt screws could cause the tensioned spring to release, resulting in injury. See Figure B.
3. While holding belt mechanism securely in place, position Beltloc on top of Mechanism and align screw holes. See Figure C.
4. Secure by reinstalling the two(2) screws. See Figure D.
5. Replace Label. See Figure E.
6. Slide the red lever to the right to unlock and release Belt or sign frame. See Figure F.

