


# Self-Closing Swing Gate

## Parts List:

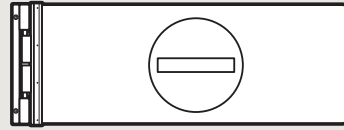

Swing Gate



Allen Wrench

1. Loosen the two socket head cap screws in the 12" long grip connector with the Allen wrench.
2. Align the full length dovetail of the grip connector to the dovetail of the post and rotate into place to engage the two dovetail brackets (push the head of the screw to maneuver the bracket).
3. Align top of grip connector to top of post (just below the mechanism cap) and tighten screws to secure in place.

**NOTE:** if a squeaking noise develops at any time during deployment, simply apply a small dab of grease to the bearing surfaces.

