
 


# Replacing Set-Screws on the Acrylic Sign

## Parts List:

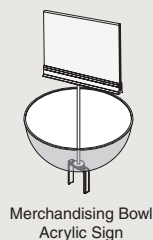

OR



Thumbscrews (2)



Goggles



Allen Wrench

## Required Tools

**These instructions apply to both the Post-top and Merchandising Bowl versions.**

1. Remove set-screws from Sign Frame using Allen Wrench. (Illustration A)
2. Insert Thumbscrews into holes and tighten by hand or use Allen Wrench. (Illustration B)

