

# Tempest Solar-Powered Beacon

 
**Parts:**

- A. Beacon
- B. Tempest Post  
(Sold Separately)


**Tools:**

- C. Allen Wrench

(A)

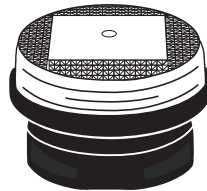

(B)

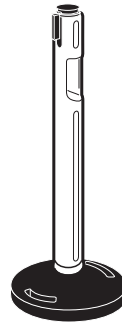 

(C)





STEP

**1**
  
## Turn Beacon On

Using the end of a paperclip or other pointy object, gently push the power button on the back of the Beacon to the ON position. Flip the Beacon over and with one hand cover the solar panel to block out light. If you see flickering LED's, your beacon is working.

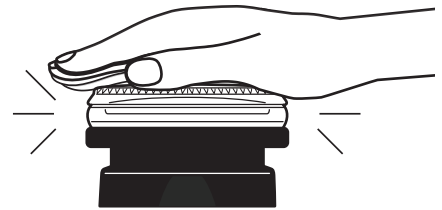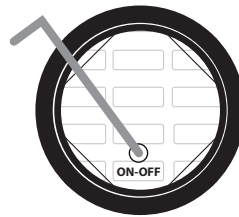


STEP

**2**
 
## Attach Beacon

To attach Beacon, simply push down Beacon assembly onto top of Tempest Post while rotating clockwise to lock into place.

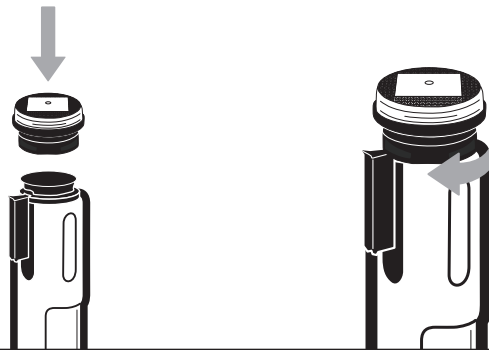

STEP

**3**

## Charge Beacon

The Beacon ships only partially charged. Place the Tempest Beacon in direct sunlight to fully charge the batteries.

