


Beltrac® Post (Knockdown with Metal Insert)

Parts List:

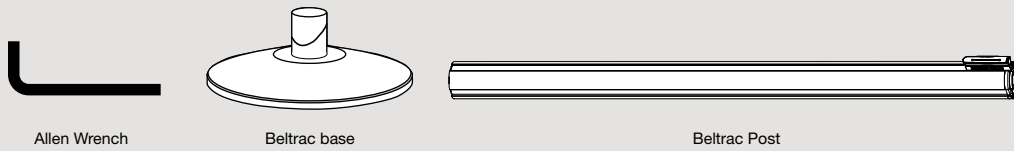

Required Tools

1. Lower the post tube onto the base insert. See Figure A.
2. The bottom rim of the post tube should be flat and flush against base. See Figure B.
3. Tilt post on its side while maintaining flush fit between post and base.
4. On bottom of the base: Use supplied allen wrench (5/16 drive) to tighten the center hex bolt until tightly secured. See Figure C.
5. Check placement of post on the base and re-tighten hex bolt if necessary.
6. Stand post upright and position post for use.

