
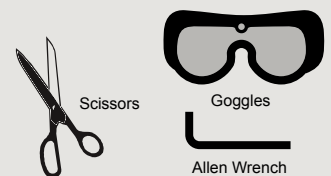


# Hand Sanitizer

## Parts List:

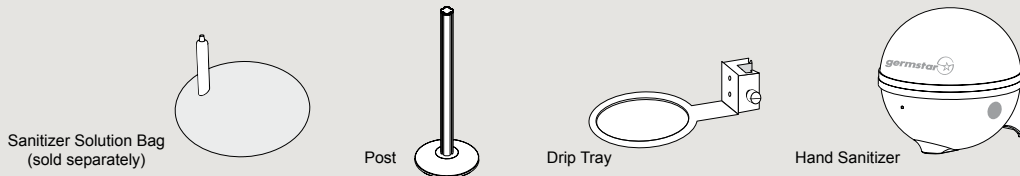

## Required Tools

1. Install Hand Sanitizer unit and Drip Tray unit to post at desired height by tightening Knurled knob (Illustration A). You may also choose to use the hex set screw to secure the unit. If choosing this method, replace the knurled knob with the set screw and use the provided allen wrench to tighten to post.
2. Remove upper globe cover by pushing in both buttons at the right and left side of the dispenser as indicated by arrows (Illustration B).
3. Remove middle tray as indicated. Install 4 D batteries (Illustration C). Place middle tray back into Hand Sanitizer unit.
4. Before inserting sanitizer solution bag into Hand Sanitizer unit, turn bag upside down as shown in picture and cut off the plastic tip (Illustration D).
5. To prevent any spilling of sanitizer solution, seal plastic tip with finger before turning sanitizer solution bag upright (Illustration E). Insert plastic tip into hole located on middle tray before seating sanitizer solution bag onto middle tray. Place upper globe cover back onto Hand Sanitizer unit (logo facing forward) by sliding both buttons into openings of the middle tray. Upper globe is installed once buttons snap into Hand Sanitizer unit.

