


Directrac®

Parts List:

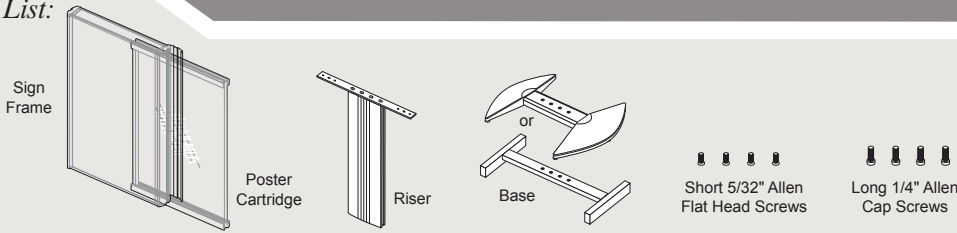

Required Tools

1. Remove the Poster Cartridge from the Sign Frame/Poster Cartridge Assembly and set aside. (Figure A)
2. Place Sign Frame upside-down in order to easily access the holes on the bottom. Align the holes on the bracket of the Riser with the holes on the bottom of the Sign Frame and secure with the 4 short Allen Flat Head Screws, tightening with the provided 5/32" Allen Wrench. (Figure B)
3. Set the partially assembled Directrac on its side. Align the holes on the bottom of the Riser with the holes on the Base and secure with the 4 long Allen Cap Screws, tightening with the provided 1/4" Allen Wrench. (Figure C)
4. Set the assembled Directrac upright and adjust (4) levelers on the Base.
5. **Insert sign graphics:** Open the Poster Cartridge by releasing the top and bottom clips. Insert sign art and secure by snapping the clips closed. Open the access door of the Sign Frame and slide the Poster Cartridge back into the Sign Frame and snap the door shut.

