



# ShuttleTrac™ Panel Cart


## Parts List:



(2) Hex Bolt



(2) Lock Washer

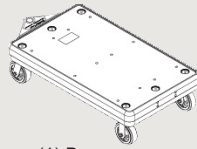

(1) Base



(2) Rack



(1) Handle (optional)



Adjustable Wrench



Goggles

## Required Tools

1. Insert metal stems from Rack assembly into the appropriate holes in the base assembly. See figure A.
2. Lay unit on its side. Secure Rack to Base assembly using threaded Bolt with Lock Washer. Insert Bolt into pre-drilled hole of undercarriage of the Base assembly and tighten both bolts. See Figure B.

