


NeXtrac® Slim Frames Fixed Captured


Parts List:




Allen Wrench



2 Beltrac posts
(sold separately)

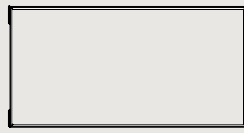

(1) Slim Frame

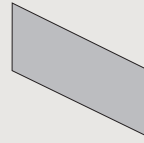

(1) Black Sintra



Allen Wrench



Goggles

Required Tools

CAUTION: Do Not Attempt to relocate the NeXtrac Slim Frame system while assembled. Please Note: Two people are required for this installation.

To change Panel or Graphic:

1. Remove top screw from side panel. Repeat on opposite side. See Figure A.
2. Lift the top frame assembly up off the lower frame as shown. See Figure B.
3. Remove Black Sintra from Slim Frame. See Figure C.
4. Insert Black Sintra and any art into frame channels. See Figure D.
5. Replace top frame assembly onto lower frame and replace screws. See Figure E.

To attach Slim Frame to post:

1. Complete installation by sliding the fixed attachment on the Slim Frame into the post's grooves. See Figure F.

