




# Tall Post Triangular Sign

## Parts List:

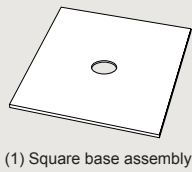

(1) Sign Frame assembly



## Required Tools

1. Apply small amount of LidoWeld™ (sold separately) to threads on threaded insert.
2. Thread insert onto Square base. Tighten completely. See figure A.
3. Place Sign Frame assembly on top of 84" Tubing and rotate to align screw holes. Install the Pan Head screw into hole of tubing and flange then tighten. See figure B.
4. Slide tubing over threaded insert while holding button down then rotate tubing until it snaps in place. See figure C.
5. To rotate sign, push button in and rotate tubing until it snaps into place. See figure D.

