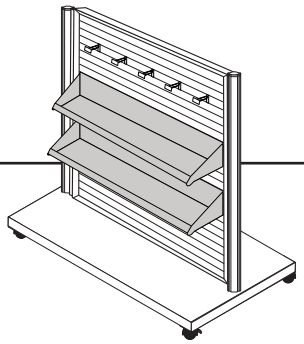

Installation Instructions

Portable Gondola With Base Insert

Parts:

A. Slatwall (1)

B. Posts (2)

C. Inlay (1)

D. Frame (1)

E. Bolts (2)

F. Lock Washers (2)

G. Spacers (2)

H. Shelf (4)

I. Label Hooks (24)

J. Compression Disc (2)

K. Rubber Inserts (2)

Tools:

L. 5/16” Allen Wrench

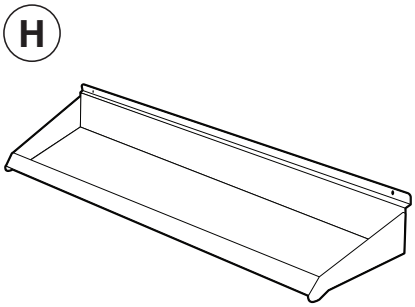

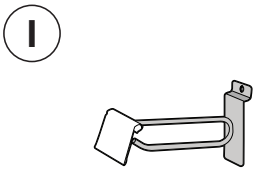

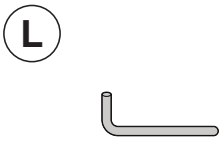

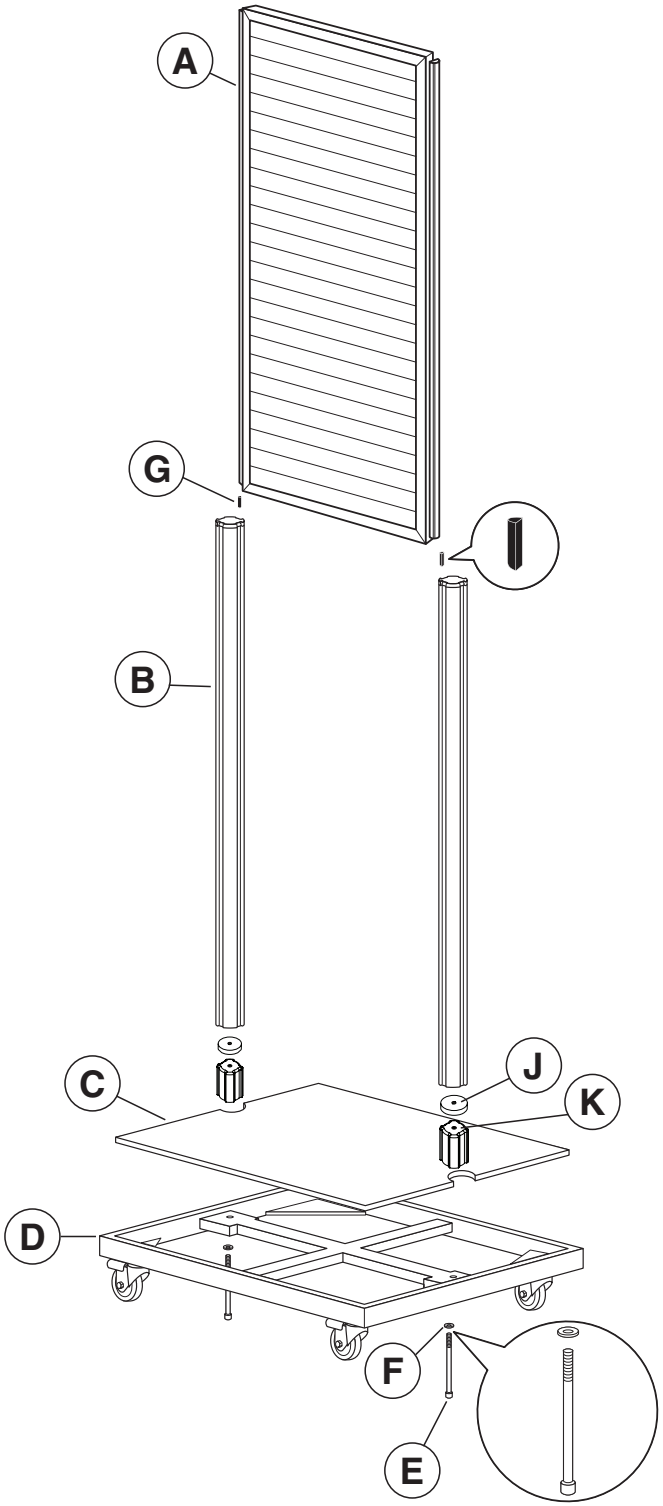

Lavi Industries

5885 E. Houston Street, San Antonio, TX 78220 • www.lavi.com • 800.624.6225

STEP 1

Place Inlay on Frame

Position Frame with Casters down to floor. Place Inlay into Frame and be sure the sticker with “this side up” faces upward. Remove the sticker after assembly. Slide Bolt with Washer through Frame and Inlay.

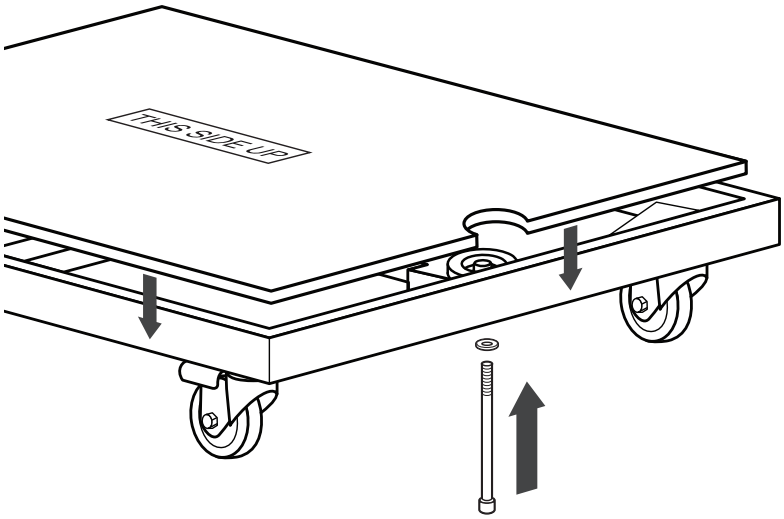

STEP 2

Slide Rubber Inserts onto Bolts

Slide the Rubber Inserts onto the bolts with the beveled edge facing up.

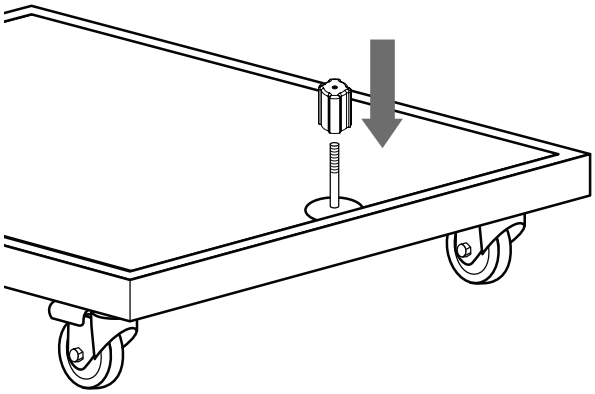

STEP 3

Add Compression Disc onto Bolts

Place Compression Disc onto bolt as shown and secure, making sure the parallel grooves of the Compression Disc are in contact with the Rubber Insert.

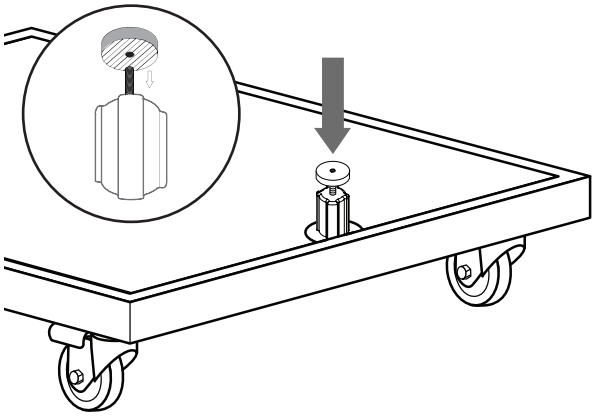

STEP
4

Secure Posts to Frame

Align post grooves to match Rubber Insert grooves then lower the post. Use supplied Allen Wrench (5/16 drive) to tighten the center of the Hex Bolt.

Do not tighten bolts completely. Leaving bolts slightly loose will help with installing Slatwall Panel in step 6.

Hint: Post grooves align to sides of frame.
Repeat this step for other Post.

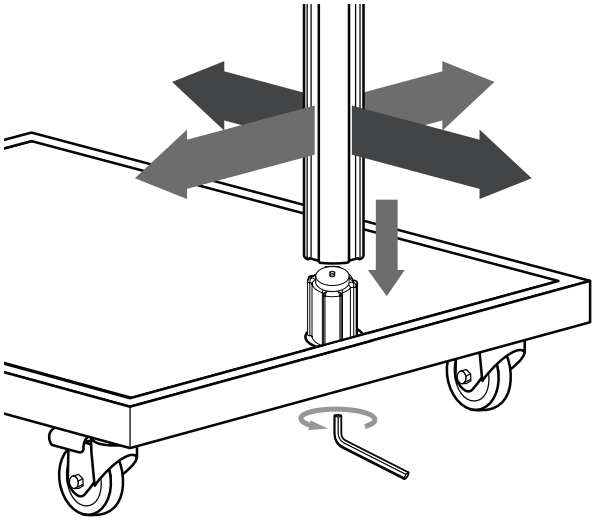

STEP
5

Place Spacers in Posts

Insert Spacers into the inside groove of post where you will be attaching the Slatwall Panel. Slide straight down the post's groove until it meets the base of the Post.

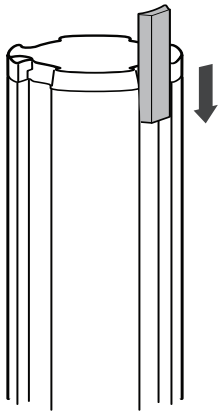

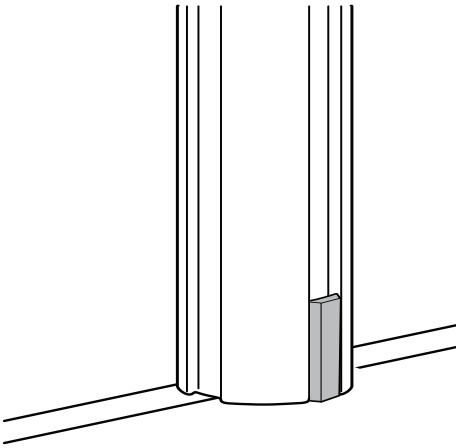

STEP **6**

Install Slatwall

For safety, two people should perform the following step. Insert the Slatwall's dovetail edges into each post's groove. Slide straight down until the Slatwall Panel meets the Plastic Spacers.

Hint: Ensure the Lavi Industries logo is located at the bottom of the Slatwall Panel. This ensures that the panel is right-side up.

Finally, fully tighten the bolts on the Posts completely to secure the Slatwall in place.

Tighten a minimum of 5 turns with at least 20ft-lbs of torque.

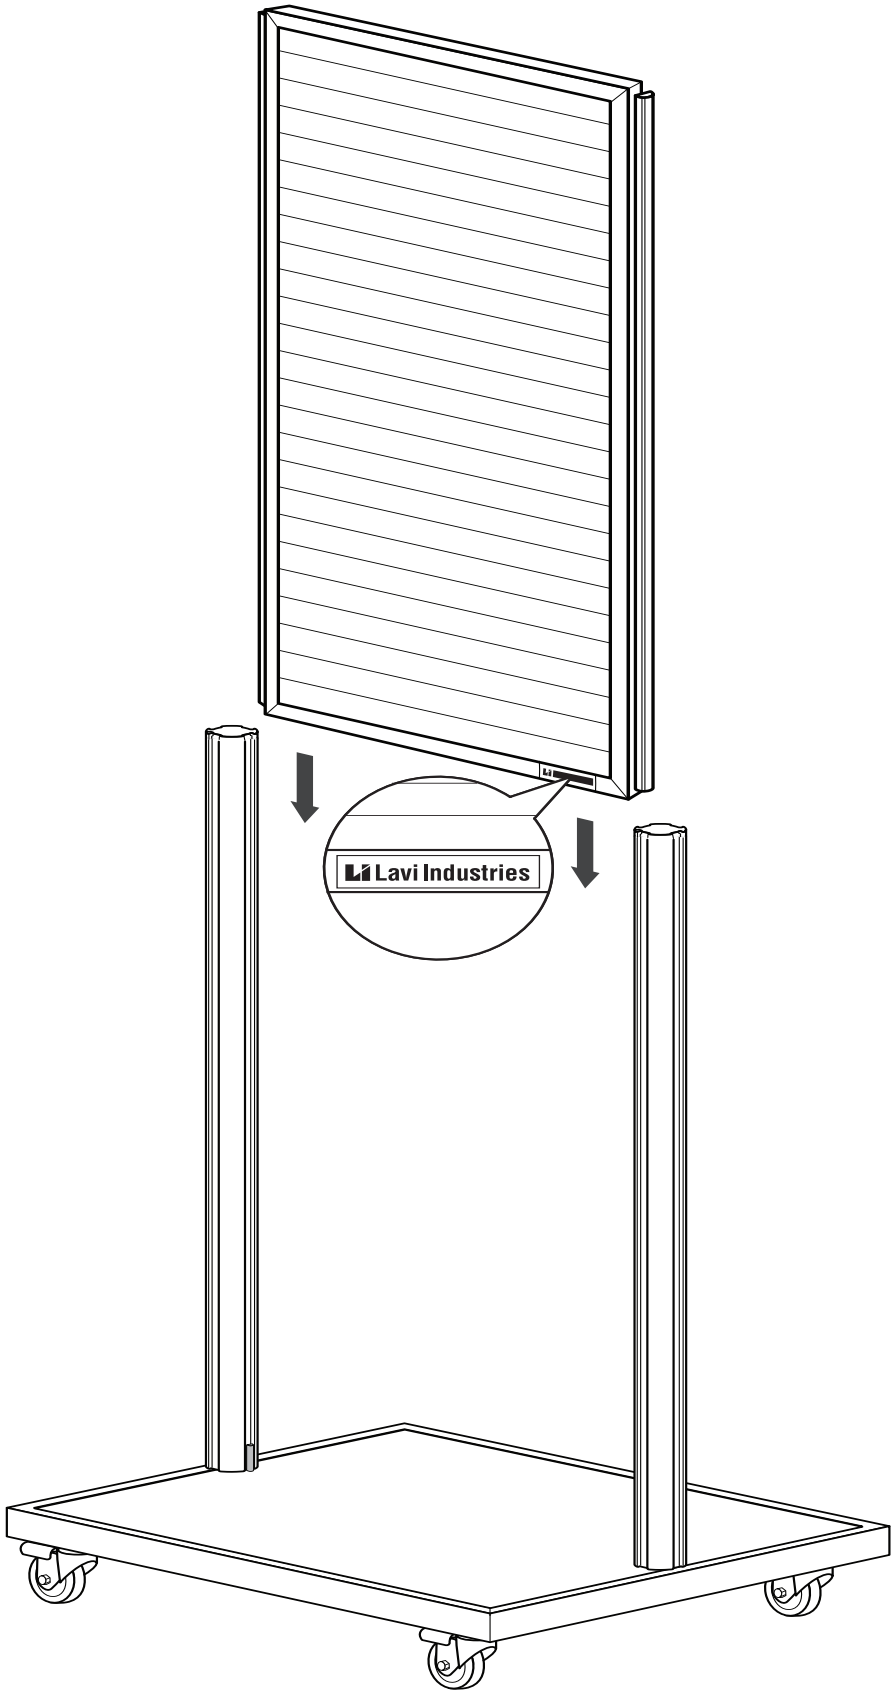

STEP **7**

Attach Slatwall Shelves

Insert back lip of shelf into Slatwall groove at a 45 degree angle. Slowly bring shelf down until it feels secure.

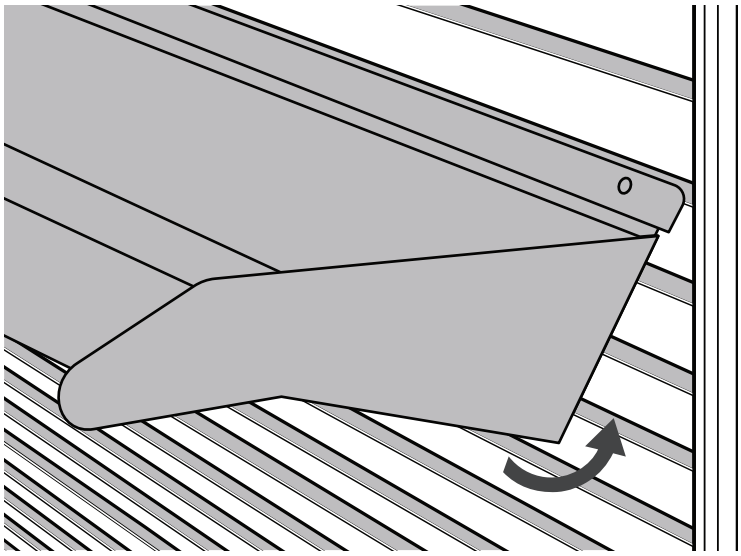

STEP **8**

Attach Hooks

Hold hook at a 45-degree angle and insert back lip into the groove on the Slatwall. Bring hook down until secure. Repeat step until desired number of hooks are placed.

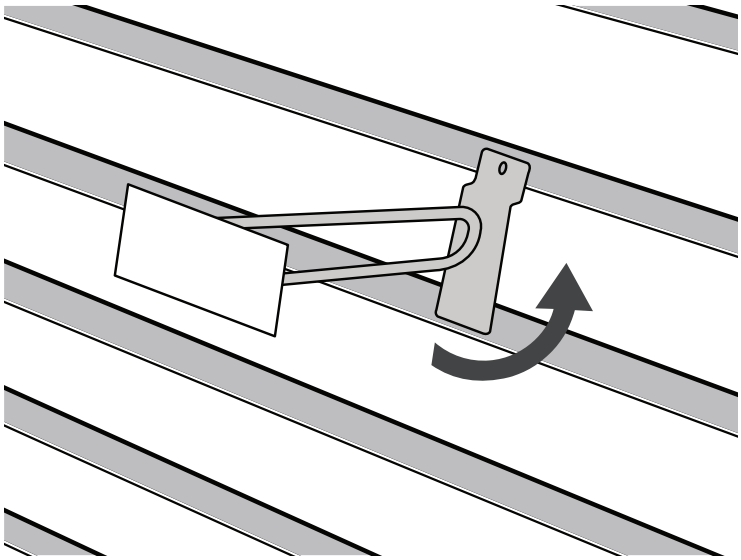

STEP **9**
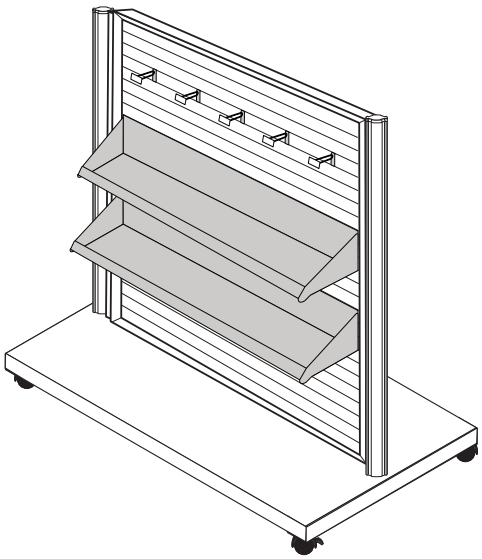
Ready to Merchandise