


Mounting Magnetic Base Posts

MOUNTING TO CARPET

Parts List:

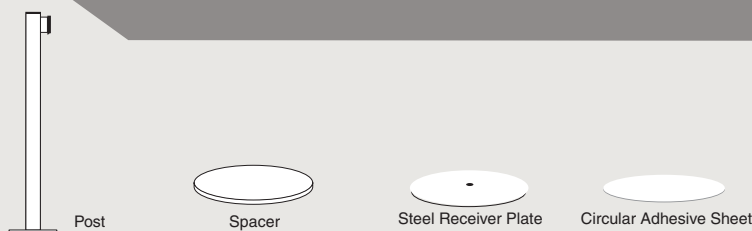



Tools Required




INSTRUCTIONS:

1. Determine the queue configuration. Measure and mark center point for the location of each post.
2. Using paper template provided, place in position and trace the perimeter of template onto the carpet.
3. Using box cutter, carefully cut out carpet disc and dry fit the aluminum spacer plate to confirm.
4. Prep the floor as best possible to remove any residue/debris. Surface should be clean and dry before installation.
5. Using appropriate adhesive determined by the nature of the base flooring material, apply as needed to the ground and plate and place spacer plate into the cutout.
6. Adhere the 3M tape disc to the bottom of the floor receiver plate.
7. Align receiver plate so it is concentric over the spacer plate and press down firmly. The receiver plate will overhang the spacer plate and carpet by approximately 1/4" all around.
8. Allow adhesives to cure fully for 24 hours.

ATTENTION: Over time, extensive handling of the stanchion may cause the rubber insert that holds the base to the post to loosen slightly. Should this happen, please use the supplied Allen Wrench (5/16 Drive) to tighten the bottom hex bolt.

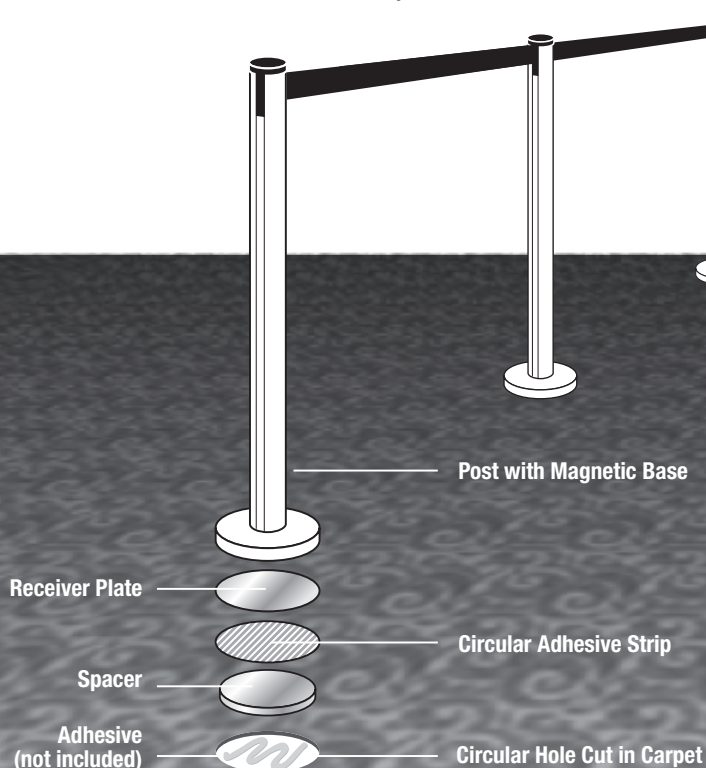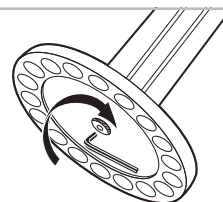

Carpet-cutting Template

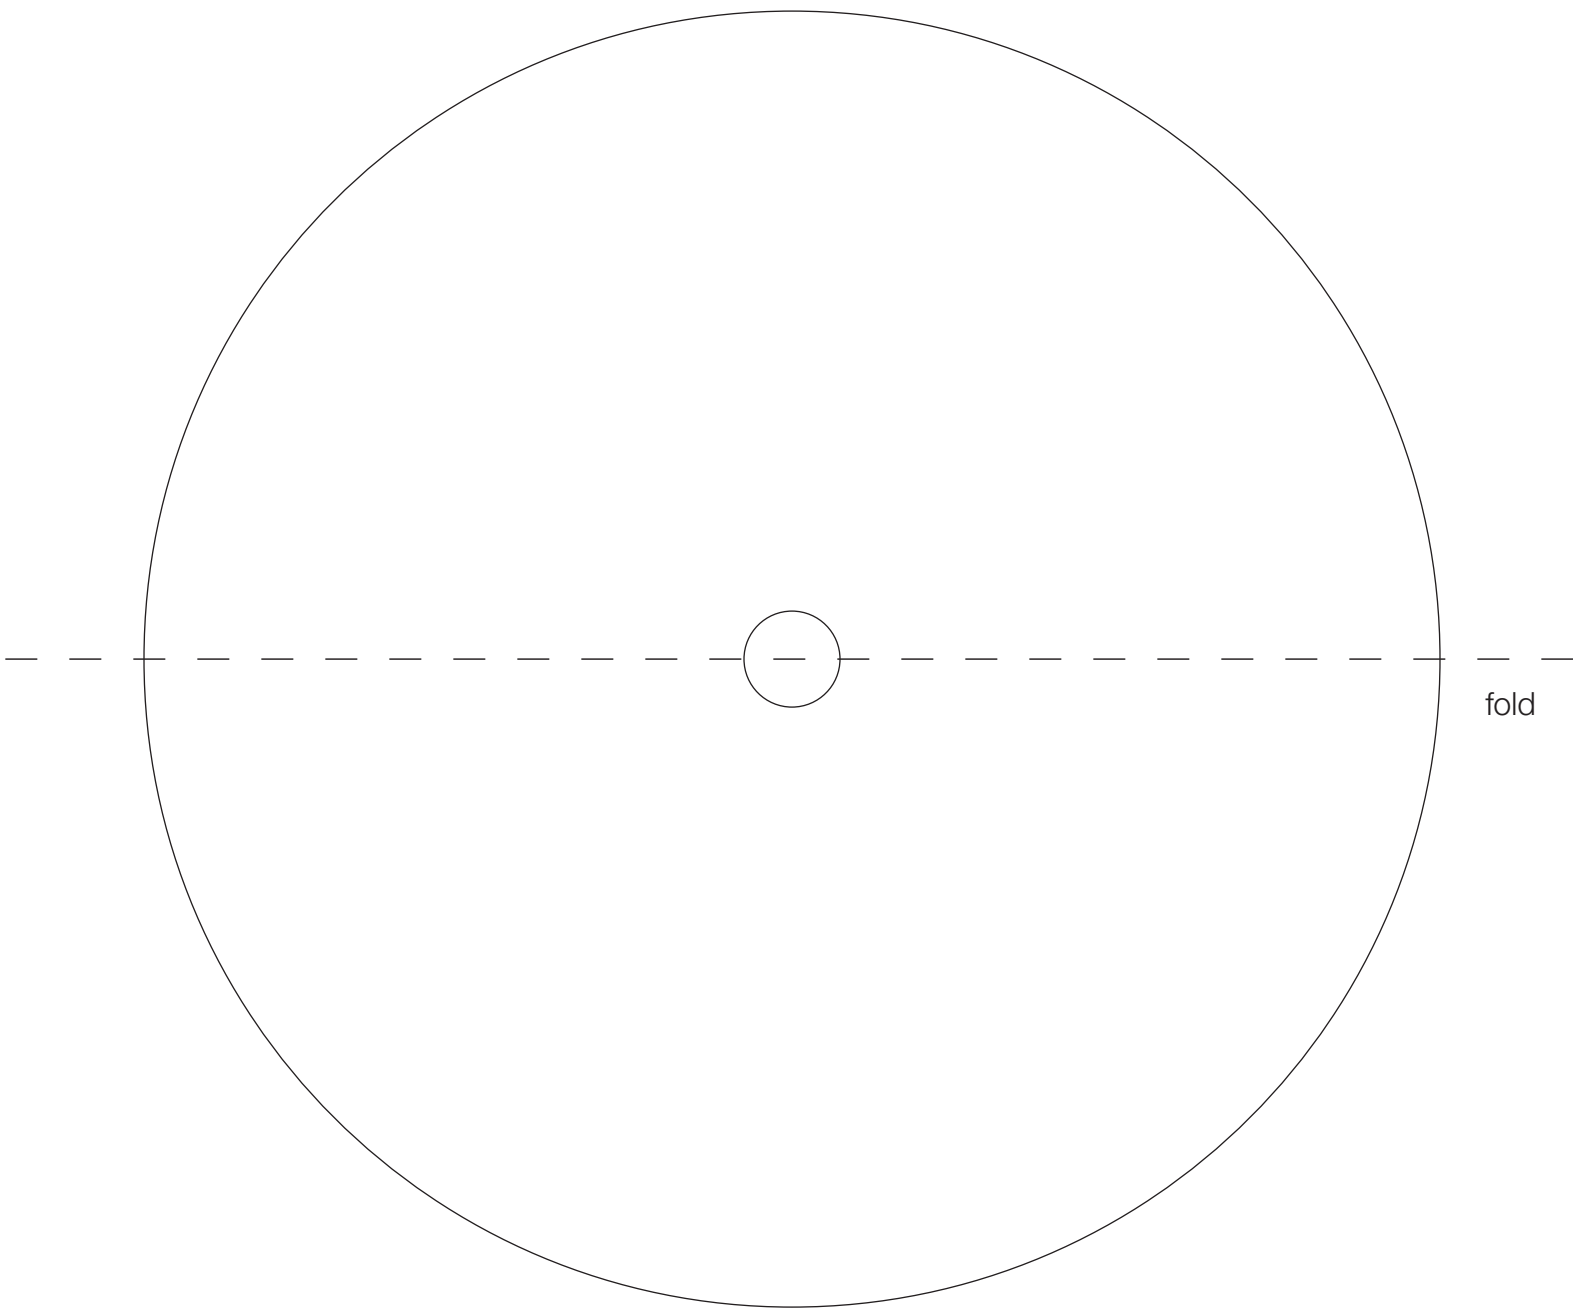

INSTRUCTIONS:

1. Print on 8½ x 11 paper at actual size (100%). Be sure "Scale to fit media" is deselected.
2. Fold along dotted line
3. Cut out center and perimeter of circle resulting in a 6¾"-diameter circle with a ½"-diameter hole in the middle.