



Assembly Instructions • Assembly Instructions • Assembly Instructions

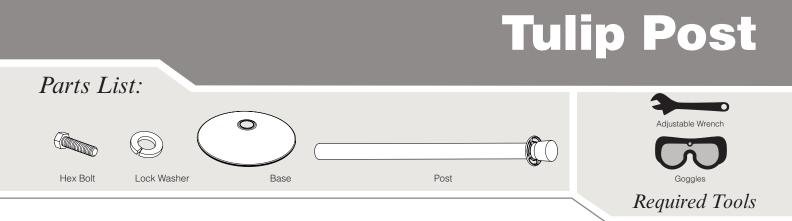

- 1. Insert bottom of Post into opening in Base. See figure A.
- 2. Turn Post and Base on its side, slip Lock Washer onto Bolt and thread into bottom of Post. See Figure B.
- 3. Tighten Bolt securely and place Post in upright position. See Figure C.

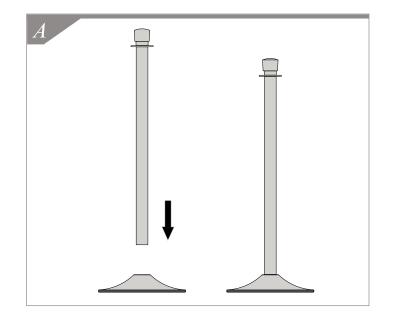

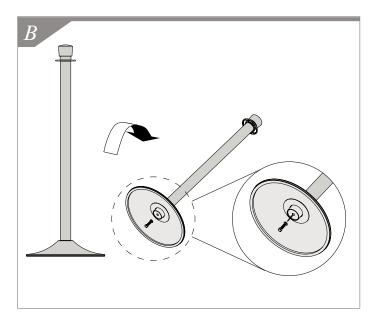

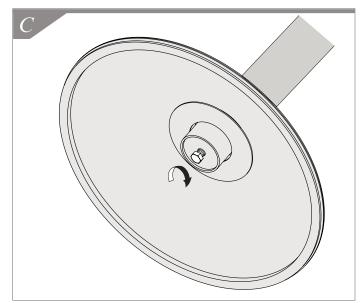

© 2025 Lavi Industries All Rights Reserved. **87-028** 2.27.09 Traditional Post Tulip 5885 E. Houston Street | San Antonio, TX 78220 800.624.6225 | 877.ASK.LAVI | 661.257.7800 sales@lavi.com | www.lavi.com

