

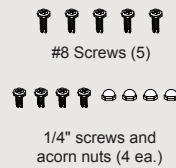
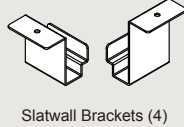


Slatwall Bin

Parts List:

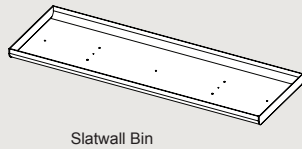

Drill and Phillips
screwdriver bit

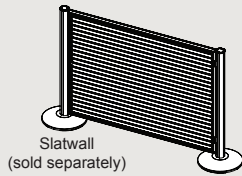

Goggles

Required Tools

Installation Instructions

- 1) Insert short brackets into left side of slatwall. **(Figure A)**
- 2) Insert large brackets into right side of slatwall. **(Figure B)**
- 3) Place Bin on top of brackets and center to top of frame. **(Figure C)**
- 4) Drill #8 screws into Bin and frame. **(Figure D)**
- 5) Position brackets with Bin side hole to insert 1/4" screw and acorn nuts. **(Figure E)**

