


# Beltrac® Post (Knockdown with Metal Insert)

## Parts List:

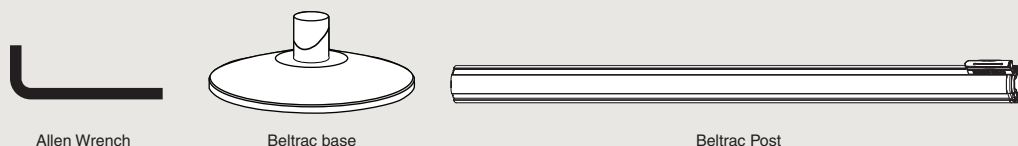

## Required Tools

1. Lower the post tube onto the base insert.  
*See Figure A.*
2. The bottom rim of the post tube should be flat and flush against base.  
*See Figure B.*
3. Tilt post on its side while maintaining flush fit between post and base.
4. On bottom of the base: Use supplied Allen wrench (5/16 drive) to tighten the center hex bolt until fully secured.  
**A SECURE CONNECTION IS IMPERATIVE:** Torque until the bolt is tight and cannot be turned by hand any further. *See Figure C.*
5. Check placement of post on the base and re-tighten hex bolt if necessary.
6. Stand post upright and position post for use.

