



Floor Socket 544

Parts List:

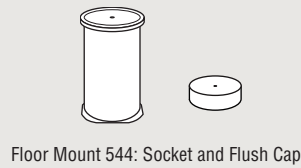

Required Tools

1. Determine post location and mark floor for position. Using a 3" diameter Hole Saw, drill a circular hole 4 3/4" deep to allow floor socket to fit inside hole. Figure A.
2. Fill hole with cement halfway. Figure B.
3. Insert Floor Socket and wiggle it down until the top of the lip sits level with the ground. Quickly clean any overflow cement. Figure C.
4. Remove Flush Cap from Floor Socket. Figure D.
5. Allow cement to dry thoroughly before inserting post. Figure E.

