


Floor Socket 545

Parts List:

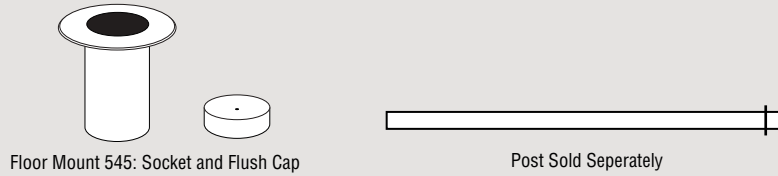

Required Tools

1. Determine post location and mark floor for position. Using a 3 3/4" diameter Hole Saw, drill a hole 4 3/4" deep to allow floor socket to fit inside hole. Figure A.
2. Fill hole with cement halfway. Figure B.
3. Insert Floor Socket and wiggle it down until the bottom of the top plate is level with the ground. Quickly clean any overflow cement. Figure C.
4. Remove Flush Cap from Floor Socket. Figure D.
5. Allow cement to dry thoroughly before inserting post. Figure E.

