


# Wire Basket End Caps

## Parts:



2 Standard Slot Rails

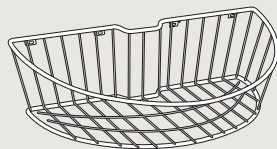

Wire Basket(s):  
NOTE: Your Kit may include 2 or 3 Baskets



2 Brackets and 4 screws for each Basket in your Kit



Phillips Screwdriver



Allen Wrench (supplied)



Goggles

## Required Tools

- Loosen set screws on both Standard Slot Rails. (Illustration A)
- Slide each Standard Slot Rail into opposite grooves of the Beltrac Stanchion that will hold the End Cap Kit. Push the extrusion all the way down. (Illustration B)
- Tighten the set screws on the Standard Slot Rails to keep it firmly in place. (Illustration C)
- Choose a desired height for each Basket. Insert 2 Brackets into opposite slots by pushing into a slot, then sliding down until secure. Make sure both Brackets are at the same height. (Illustration D)
- Position the Basket in front of the 2 Brackets, making sure that the 4 tabs on the basket align with the screw holes on the brackets. (Illustration E)
- Verify heights for each Basket, as once secured, Baskets can not be repositioned without disassembly.
- Using a Phillips screwdriver, secure the Basket to the Brackets using the 4 screws provided. (Illustration F)
- Repeat steps 4-6 for each Basket.

