Lavi Industries

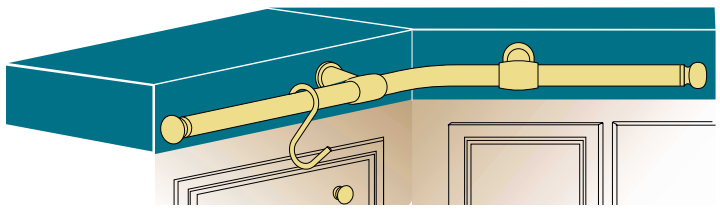

How To Install My Gourmet Rail

Do It Yourself Level

Easy	Moderate	Complex

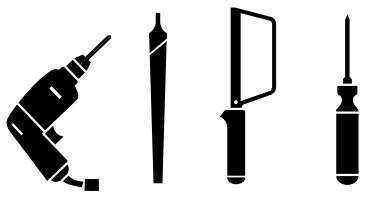

Necessary Tools

- Electric Drill/Electric Screwdriver
- Hack Saw/Cut Off Saw
- Phillips Screwdriver
- File

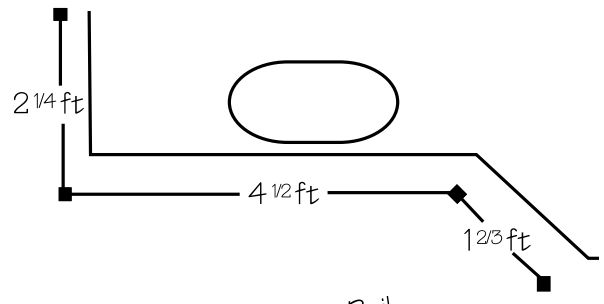

Kitchen Gourmet Rail Measurements

Plan

- Measure all sides of your counter where you will be installing your gourmet rail.
- Make a simple sketch of your Gourmet Rail. The materials needed include tubing, gourmet rail brackets and end caps. You may also need tube connecters and/or elbows, depending on your specific project.
- Determine the length of the tubing and be sure to include the dimensions that the brackets and fittings may add or subtract from the overall length of the tubing. We recommend that the Gourmet Rail be supported every 24".
- Create a detailed part list consisting of all parts and quanitites required. When calculating quanities of brackets required, place a bracket 6" from the tube ending and either side of an elbow. Then space equally throughtout the lentgh of the rail. We recommend spacing the brackets 24" apart. LIDO offers standard 45º and 90º corners to match gourmet rail tubing. Locating mounting brackets at the end of corner pieces allows you to conceal the tubing connection within the bracket itself.
- **Place your order!**

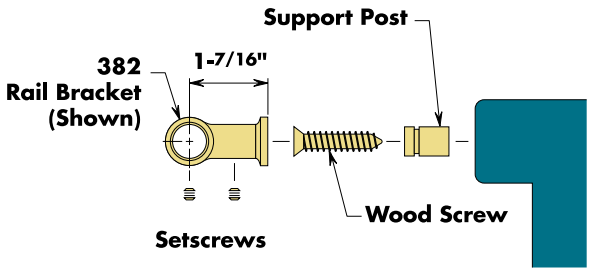

Preparation

- Mark the tube for the appropriate length for cutting. When determining tube cut lengths, keep in mind that the connecting joints should be concealed within a bracket. Double-check all measurements before cutting. See How To Cut Tubing Instructions.
- Loosely assemble the Gourmet Rail by sliding the tubing through the brackets without adding the Setscrews.
- Mark the location of your brackets with a pencil.

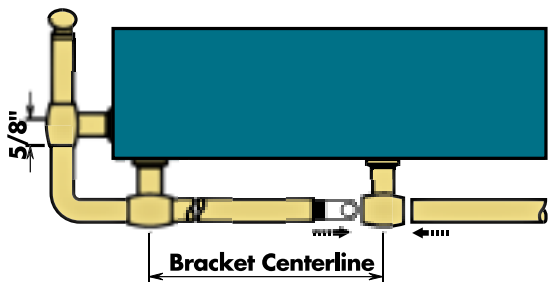

Spacing Not To Exceed 24"

Installation

- Gourmet Rail brackets are different from other LIDO mounting hardware because they are designed to attach to the front of the counter without visible screws. The mounting bracket consists of two pieces, a mounting post, and bracket. Install the mounting post at the positions determined in the preparation phase of your project.
- To mount the Gourmet Rail to a wood or laminate surface, it is best to drill a 1/8" starter hole then screw the mounting post into place. When mounting to tile, granite or Corian® please follow counter top manufacturers instructions.
- Install the loosely assembled gourmet rail to the mounting posts. The brackets are secured to the mounting post by tighten a small setscrew on the underside of the bracket with the supplied Allen wrench.
- Once the Gourmet Rail brackets are secure, use the Allen wrench to tighten the setscrews that secures the tubing to the brackets.
- Gourmet Rail end caps are designed to press into place.
- When the job is done it is not necessary to polish Gourmet Rail because it is factory sealed with a clear coat finish.
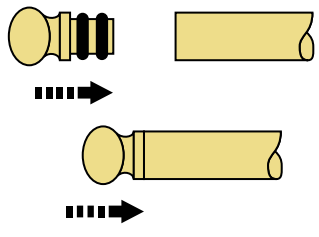
382 Rail Bracket with Rubber O-Rings