


NeXtrac® Slim Frames *Fixed Slotted*


Parts List:



2 Beltrac posts
(sold separately)



(1) Slim Frame

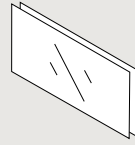

(2) Clear Acrylic



Goggles

Required Tools

CAUTION: Do Not Attempt to relocate the NeXtrac Slim Frame system while assembled. Please Note: Two people are required for this installation.

To change Panel or Graphic:

1. Remove acrylic sheets from Slim Frame.
See Figure A.
2. Sandwich Graphic between supplied acrylic sheets.
See Figure B.
3. Slide acrylic sheets along with Graphic into frame channels as shown. See Figure C.

4. Remove protective film from acrylic sheets.

To attach Slim Frame to post:

1. Finally, mount Slim Frame to posts by sliding the fixed attachment of the Slim Frame down the post's grooves.
See Figures D, E, F.

