Assembly Instructions • Assembly Instructions • Assembly Instructions

Beltrac[®] Post with Slim Base (Knockdown with Rubber Insert)

Allen Wrench

Beltrac Post

Hex Bolt Unit

0

Compression


Disc


Rubber Insert

Parts List:

Slim Base

- 1. Rotate Base vertically and insert Bolt and washer from underneath base. See Figure A.
- 2. Slide the Rubber Insert onto Bolt from opposite side of base with beveled edge facing away from the Base. See Figure B.
- Place Compression Disc onto Bolt as shown and secure, making sure the parallel grooves of the Compression Disc are in contact with the Rubber Insert. See Figure C.
- Align post grooves to match Rubber Insert grooves then lower the post onto the Base. See Figure D.
- 5 . On bottom of the base: Use supplied Allen Wrench (5/16 drive) to tighten the center Hex Bolt.
 Tighten minimum of 5 turns with at least 20 ft–lbs of torque. See Figure E.

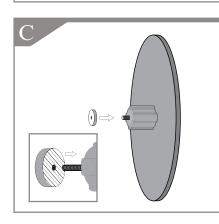


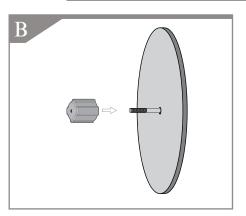


Required Tools

Allen Wrench

(supplied)

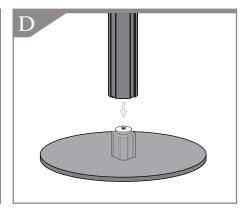

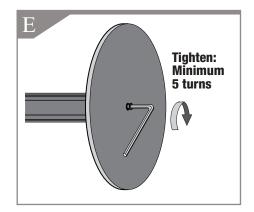

© 2014 Lavi Industries All Rights Reserved. 87-130 04.06.16 Beltrac Slim Base Rubber Insert 27810 Avenue Hopkins | Valencia, CA 91355 800.624.6225 | 877.ASK.LAVI | 661.257.7800 sales@lavi.com | www.lavi.com

Lavi Industries